


# Princeton Trellis


72"H x 32"W x 3"D

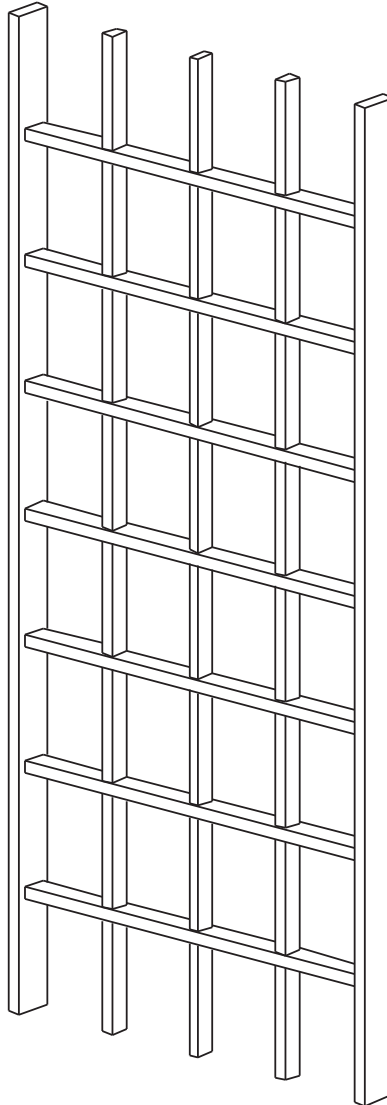

**IMPORTANT! PLEASE BE SURE TO FOLLOW INSTRUCTIONS CAREFULLY, IN THE PROPER SEQUENCE! THANK YOU**


## PARTS LIST

QTY	DESCRIPTION	QTY	DESCRIPTION
2	7/8" x 3" x 78"	2	7/8" x 3" End Caps
7	7/8" x 2" x 30 1/4"	3	7/8" x 1 1/2" End Caps
3	7/8" x 1 1/2" x 72"	2	Post Anchors

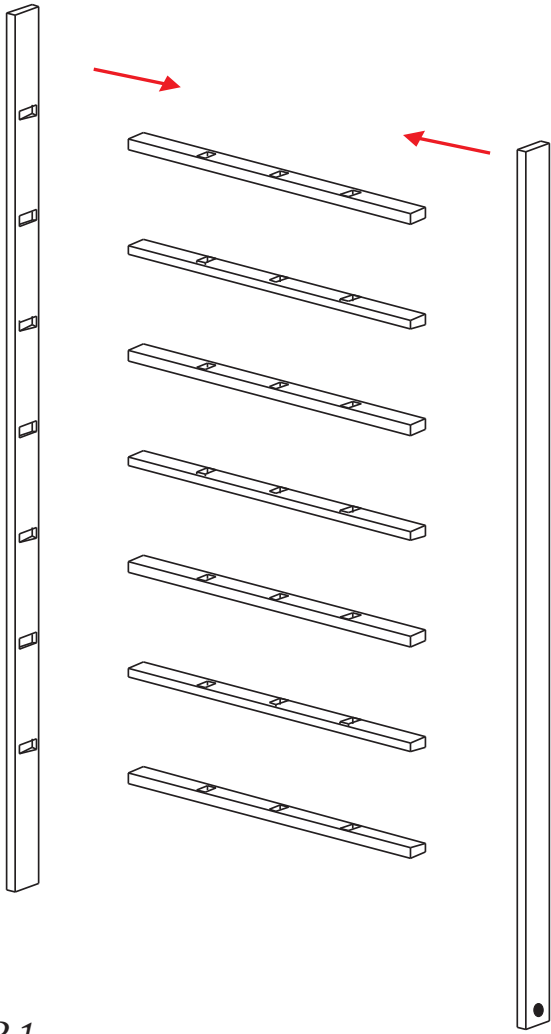

### STEP 1

Snap the horizontal rails into the  $\frac{7}{8}$ " x 3" routed posts making sure the capped ends of the posts are facing upward.

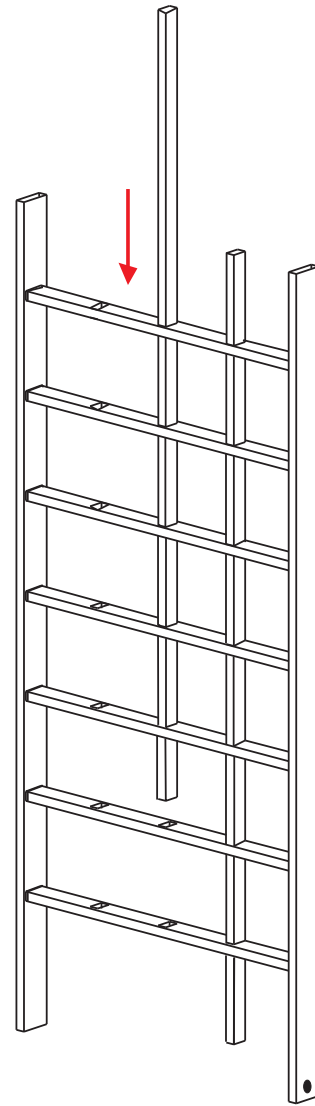

### STEP 2

Feed the  $\frac{7}{8}$ " x  $1\frac{1}{2}$ " verticals through the rails until their tops are level with the tops of the posts. Please note to position the closed ends (capped) of these verticals facing upward.

### STEP 3

Excavate 2 holes approximately 6" deep and position the trellis into the holes. Drive 2 post anchors through each post upright. Backfill the holes with soil to cover the post anchors.

